




400-524 INSTALLATION INSTRUCTIONS 98-04 Ford Mustang GT 4.6L SOHC (Will Only Fit Return-less Fuel System Cars)

Thank you for purchasing the Airaid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Your Airaid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

Thank you for selecting AIRAID.

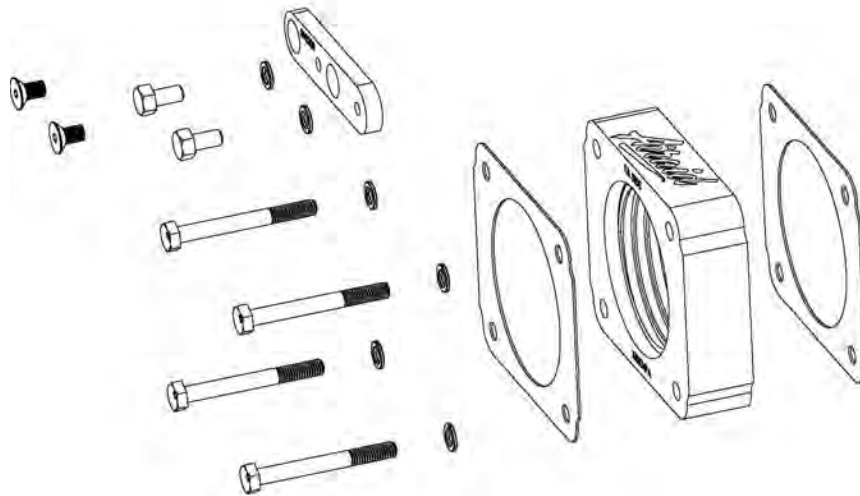

**THROTTLE BODY SPACERS FOR VEHICLES LISTED ARE
50 STATE LEGAL. SEE AIRAID.COM FOR CARB STATUS ON
EACH PART FOR A SPECIFIC VEHICLE.**

Parts List

AIR-KIT524PA	Aluminum Plate	(1)
AIR-KIT524G	Gasket	(2)
AIR-KIT524H	Hardware	
	Hex Bolts 6mm x 50mm	(4)
	Lock Washers 6mm	(6)
	Extension Plate	(1)
	Hex Bolts 6mm x 12mm	(2)
	Flat Head Screws 6mm x 12mm	(2)

Tools List


10mm Socket
5/32" Allen Wrench
Flat Head Screwdriver

Installation Instructions. Read Me!

1. **DISCONNECT NEGATIVE (-) BATTERY CABLE.**
2. Remove air intake hose assembly.
3. Remove (2) bolts from throttle linkage bracket (**Ref. "C"**).
4. Remove (4) bolts from throttle body (**Ref. "B"**).
5. Install spacer and gaskets using (4) 6mm x 50mm bolts and lock washers (**Ref. "A"**).
 - * Note: Throttle Body side, engraved on power plate (Throttle body side). Tighten bolts evenly.
 - A. One gasket located between spacer and intake manifold.
 - B. One gasket located between spacer and throttle body.
6. Install throttle linkage extension plate using (2) 6mm x 12mm flat head screws. (**Ref. "C"**).
7. Install throttle linkage bracket using (2) 6mm x 12mm hex bolts and washers. (**Ref. "C"**).
 - * Note: Do not use 1/8 inch fiber spacer.
8. Inspect & Test throttle linkage for full Open & Closed travel before driving. Some cruise or kick-down cables may require adjustment. Refer to service manual for proper adjustments.
9. Reinstall air intake hose assembly (**Step 2**).
10. Reconnect battery cable. Enjoy!

The sound of power...The "whistle" means its working!

- (1) Extension Plate
- (2) Hex Bolts 6mm x 12mm
- (2) Flat Head Screws 6mm x 12mm
- Ref. C-** (2) Lock Washers 6mm

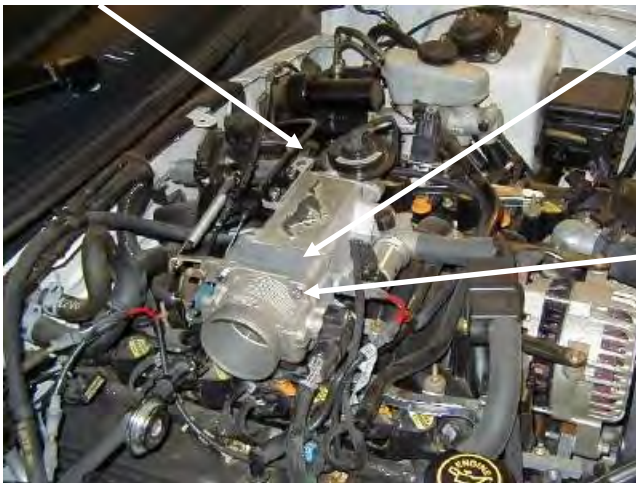

- Ref. A-** (1) Spacer
- (2) Gaskets

- Ref. B-** (4) Hex Bolts 6mm x 50mm
- (4) Lock Washers 6mm

AIR-I40524C
Rev. 12.23.16