

BBK PERFORMANCE LLC
3060 Performance Circle
Deland, FL 32724

For any questions, email us:
TECH@BBKPERFORMANCE.COM



INSTALLATION INSTRUCTIONS - INS264

UNIVERSAL OIL SEPARATOR KIT

Part # 1897



Special Tools required: None.



Install Time: Approximately 1 hour.



Difficulty: Easy.

When Installing make sure that the hose for the draw side installs with the flow arrows on the top of oil separator cap.



MADE IN U.S.A.

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019

BBK PERFORMANCE LLC
3060 Performance Circle
Deland, FL 32724

For any questions, email us:
TECH@BBKPERFORMANCE.COM



FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

This BBK Universal Oil Separator Kit can be installed and used on many different car and truck applications with the supplied BBK universal mounting bracket. This bracket has different hole placements for mounting the oil separator in various locations on a vehicle.



MADE IN U.S.A.


IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019




FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

CARBURETED (TYPICAL)

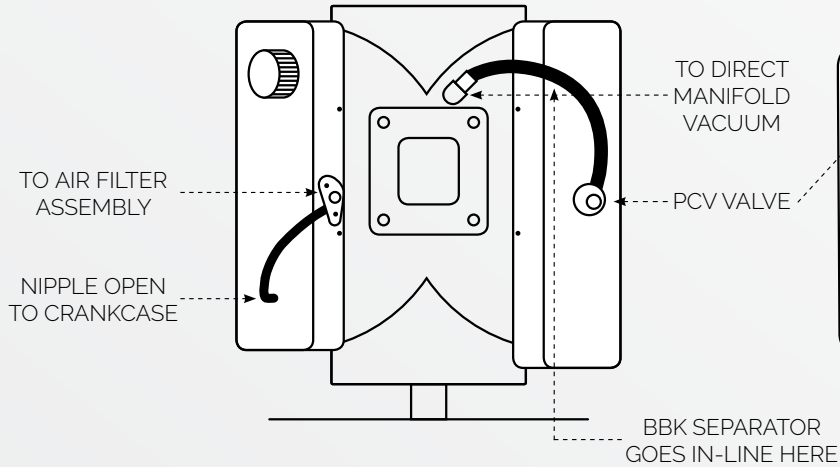

FUEL INJECTED (TYPICAL)

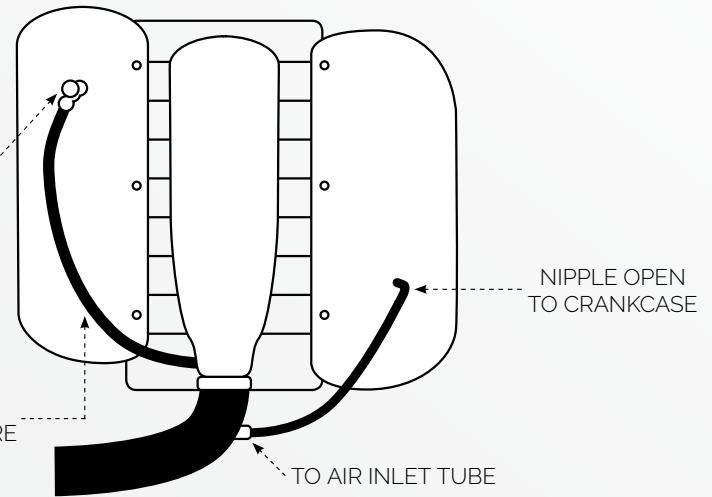

**WE RECOMMEND DRAINING OF AIR OIL SEPARATOR EVERY 1,000 MILES OR AS NEEDED;
THIS WILL OF COURSE DEPEND ON DRIVING CONDITIONS!**

For normal day to day driving check every 1,000 miles until a baseline is established. A good baseline is to drain the Air Oil Separator when it is about HALF full. This will vary with temperatures (cold winters vs. hot summers). Simply Unscrew the base of the oil separator – drain the oil and clean out the canister base. Once clean re-install and you are good to go for another 1000+ miles.

MADE IN U.S.A.

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019