

**INTAKE SYSTEMS FOR VEHICLES LISTED ARE 50 STATE LEGAL. SEE AIRAID.COM FOR CARB STATUS ON EACH PART FOR A SPECIFIC VEHICLE.**

**Installation Instructions  
Part Number 200-630-1**

- 2008-13 Buick Enclave
- 2013 Cadillac ATS
- 2008-13 Cadillac CTS 3.0&3.6L
- 2008-09 Chevrolet Equinox Sp.
- 2008-11 Chevrolet Malibu
- 2008-11 Chevrolet Traverse
- 2008-13 GMC Acadia
- 2008-09 Pontiac G6 GXP
- 2008-09 Pontiac G8
- 2008-09 Pontiac Torrent GXP
- 2008-09 Saturn Outlook
- 2008-09 Saturn Vue XR
- 2008-09 Suzuki XL7  
3.6L V6

**Parts List**

- AIR-KIT630-1PA Aluminum Plate (1)
- AIR-KIT630-1G Gasket (2)
- AIR-KIT630-1H Hardware (4)
- 6mmx50mm Bolt (4)
- 6mm Flat Washer (4)

**Tools Required For Installation**

- 5/16", 10mm Socket
- Ratchet and Extension

Thank you for purchasing the Airaid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Your Airaid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

*Thank you for selecting AIRAID.*

**These instructions depict an installation being performed on a typical application and is meant to be a guide for all makes and models listed. While specific details may vary from vehicle to vehicle, the general install procedure remains the same.**



**1. Disconnect the negative battery cable!**  
 Remove the oil fill cap and set it aside.  
 Lift straight up on the front of the engine beauty cover and set it aside.  
 Reinstall the oil fill cap after the beauty cover has been removed to prevent any foreign material from entering the crankcase.




**2.** Disconnect the breather hose elbow at the hard plastic breather tube. Loosen the two hose clamps that secure the intake tube to the throttle body, and the air cleaner lid.  
 Remove the air intake tube.



3. Remove the four bolts that secure the throttle body to the intake manifold. *Note that the lower passenger side bolt secures a metal bracket holding a wiring connector. Make sure to remount this bracket in the same location in step #4.*



4. Install the Airaid Spacer between the throttle body and the intake manifold with the first supplied gasket next to the intake manifold, and the second supplied gasket next to the throttle body as shown. Install the provided bolts and washers thru the throttle body and the Airaid Spacer and tighten to the vehicle manufacturer's specifications. \*Note: Airaid spacer must be installed with bore protruding into intake manifold away from throttle body. Incorrect installation will hinder performance. Reference picture below for spacer orientation.

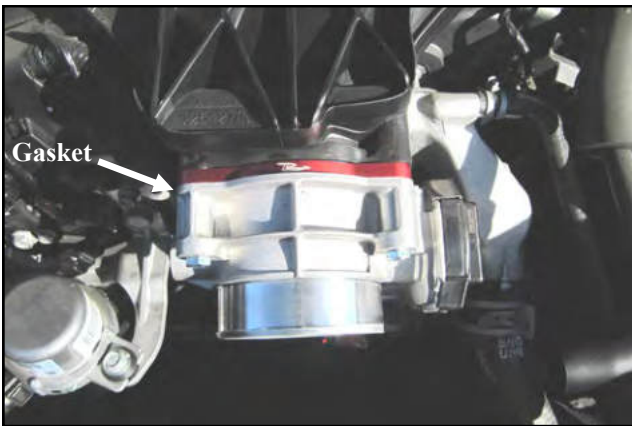

5. Vehicles equipped with plastic intake manifolds have an O ring pressed into the throttle body mounting surface. On these applications only a single gasket is to be used between the spacer and the throttle body. Discard the second gasket.



6. Reinstall the intake tube, tighten the two hose clamps, and reconnect the crankcase breather tube. Reinstall the beauty cover, and oil cap in the reverse order that they were removed. **Re-connect the negative battery cable!**

***The sound of power...The "whistle" means its working!***



**Example of proper spacer installation. Spacer must protrude into intake manifold and away from throttle body.**

AIR-I20630-1C  
Rev. 6.29.20

Contact your nearest Airaid dealer for an Airaid Intake System for your car, truck or SUV.

Airaid. 1455 Citrus St, PO Box. 1329, Riverside, CA 92502 (800) 498-6951 [AiraidInfo@airaid.com](mailto:AiraidInfo@airaid.com)