



Installation Instructions

For Part Numbers:

450-303 700-461 Airaid Oiled Media Filter

2011-14 Ford Mustang GT

5.0L V8 Race Only

TUNE REQUIRED !


This intake system is not calibrated to any ECU and requires custom, vehicle specific tuning for proper drivability and to prevent costly engine damage. Installing off the shelf, plug in type programmers does not constitute Custom Tuning.

NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.

See AIRAID.COM for CARB status on each part for a specific vehicle.

Component Identification

1. Airaid Premium Filter	1	12. #64 Hose Clamp	1
2. Intake Tube	1	13. #56 Hose Clamp	1
3. Cool Air Box	1	14. 40-60mm Hose Clamp	1
4. Urethane Hump Hose	1	15. Firewall Plug	1
5. Silicone Reducing Coupler	1	16. Urethane Cap	1
6. Filter Adapter	1	17. PCV Connector Fitting	1
7. Weather Strip 25"	1	18. PCV Fitting	1
8. 1/4-20 x 1/2" Button Head Cap Screw	3	19. Grommet	1
9. 1/4" Flat Washer	3	20. Grommet	1
10. 8-32 x 3/8" Button Head Cap Screw	2	21. Grommet Plug	1
11. #72 Hose Clamp	2	22. #20 Torx Driver	1
		23. Airaid Decal	1

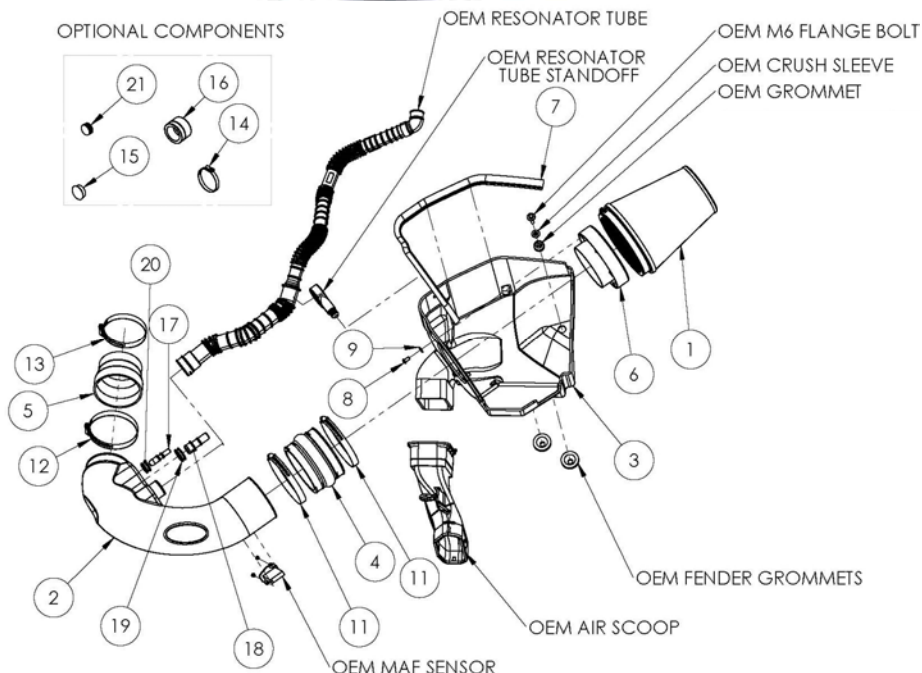


Full color instructions can be viewed on our web site at Airaid.com. If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.




Disconnect The Negative Battery Terminal!

1. Remove the strut tower brace, if so equipped. Remove the Engine cover by simply lifting up, and set aside.

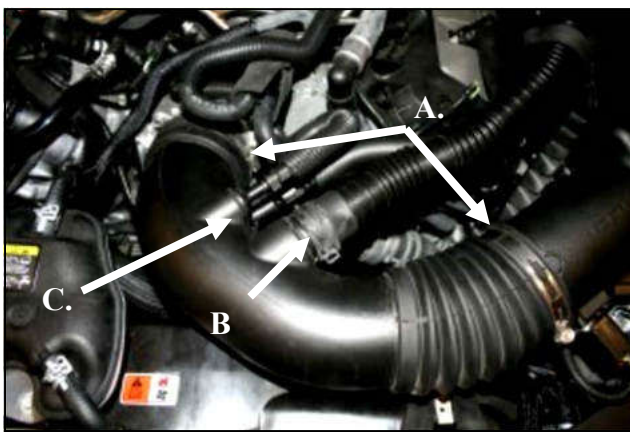

2. A) Loosen the hose clamps on the factory intake tube B) Squeeze the clamp and disconnect the resonator from the air intake tube. C) Carefully depress the hose lock tabs, and disconnect the crank case breather line and the brake aspirator line (if equipped, AT models only). D) Remove the factory intake tube.

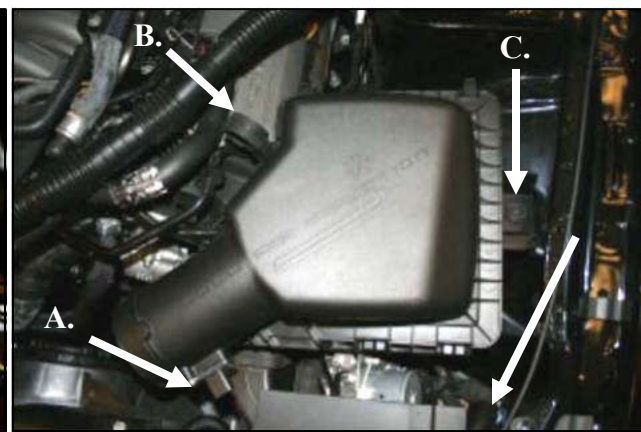

3. A) Slide the red tab, and disconnect the wiring harness from the Mass Air Flow sensor (MAF). Carefully pry the harness anchor from the air box using a screwdriver. B) Separate the resonator tube from the stand off attached to the Air box lid. C) Using a 10mm socket, remove the bolt securing the air box to the inner fender and remove the air box assembly. This bolt will be reused in step 9.



4. Install the Grommets and Fittings into the Airaid intake tube (#2). A) All models will require the use of the 5/8" Fitting (#17) and the 5/8" Grommet (#19). B) Automatic transmission equipped vehicles will also use the 3/8" Fitting (#17) and 3/8" Grommet (#20). Manual transmission vehicles will not need the 3/8" components and will use the Blind Grommet (#21).




5. Using the supplied Torx driver, remove the MAF sensor from the factory airbox and install the MAF sensor into the intake tube using two provided 8-32x3/8" screws (#10).

Do Not Use The Factory Screws!



6. Install the filter adapter (#6) using three 1/4-20 button head bolts (#8), and flat washers (#9) into the Airaid Cool Air Box (CAB) (#3) as shown.

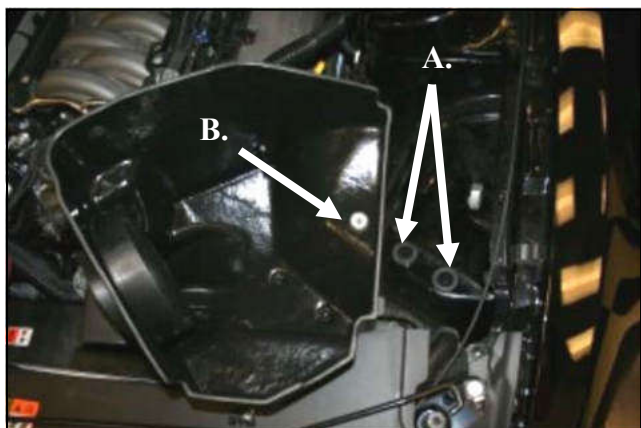

7. Transfer the factory air box mounting grommets. A) Locate and remove the Two Lower air box mounting grommets, and install them in the inner fender. B) Remove the Upper air box mounting grommet and steel sleeve, and re-install into the Airaid CAB.



8. Install the hump hose (#4) onto the filter adapter using two #72 hose clamps (#11) as shown. Leave the two hose clamps loose for now. Transfer the resonator stand off from the factory air box into the CAB.




9. Install the CAB into the vehicle. Make sure that the Air inlet of the CAB aligns with the factory duct, and the two locating pins on the bottom align with the factory grommets. Next reinstall the factory bolt that was removed in step #3 thru the steel sleeve and grommet and into the inner fender.



10. Install the Silicone Reducer (#5) and Hose clamps onto the throttle body. Place the #56 clamp (#13) on the Throttle body side of the reducer, and the #64 clamp (#12) on to the tube side.



11. Install the Airaid Intake Tube into the couplers, and tighten all Hose clamps. **A)** Reconnect the Resonator tube to the Airaid Intake using the OEM clamp. **B)** Reconnect the breather line/lines to the Aluminum Fittings depending on your application. Apply the Airaid decal onto the Tube as shown.

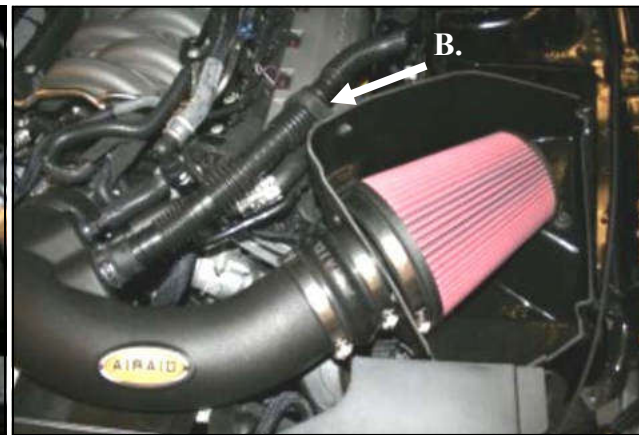

12. **A)** Install the Airaid Premium Filter (#1) onto the filter adapter and tighten the hose clamp. **B)** re install the Resonator tubing into the factory Stand off.



13. Reconnect the Mass Air Flow sensor, which is now located in the lower back side of the intake. Slide the locking tab back into the connector.



14. Install the Weather Strip (#7) onto the CAB with the contoured edge going away from the filter. Start at the front of the vehicle and work your way back. Replace the engine cover.

15. Double check your work!

Make sure there is no foreign material in the intake path. Make sure all clamps, hoses, bolts, and screws are tight. Double check the hood clearance!

Reconnect the negative battery cable!


Optional Installation Notice!

Airaid has made it possible to eliminate the factory induction roar resonator if you so desire. The removal of the resonator from the intake has no negative effect on the performance of this kit.

Remove the entire Resonator tube assembly and all associated stand offs from the intake tube to the Fire wall.

A.) Install the Urethane cap (#16) with the 60mm Hose Clamp (#14) onto the Airaid Intake tube.

B.) Snap the Firewall plug (#15) into the firewall hole.

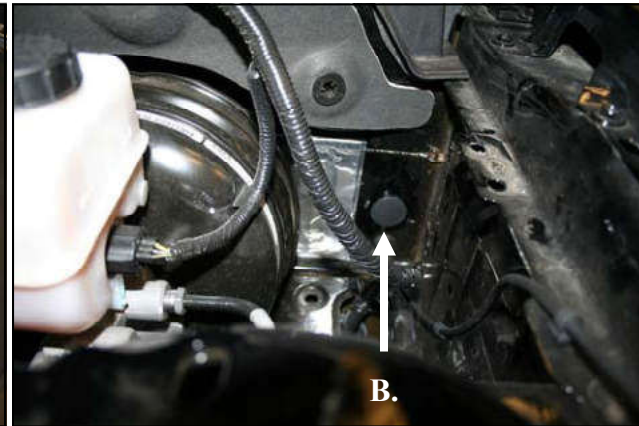

Thank you for purchasing the Airaid Intake System. Contact Airaid @ (800) 498-6951 8:00 AM - 5:00 PM MST weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid Intake System was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, contact Airaid. The air filter element is protected from direct exposure to water and debris; care should be taken not to drive through deep water. WATER INGESTION IS THE DRIVERS RESPONSIBILITY! The air filter is reusable and should be cleaned periodically.

FILTER IDENTIFICATION

700-461 Airaid Oiled Media
702-461 Airaid SynthaMax Dry Media - Black

For your Oiled media filter we suggest using the AIRAID Filter Tune-Up Kit!



P/N 790-551 Aerosol Spray
P/N 790-550 Squeeze Spray



NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.

See AIRAID.COM for CARB status on each part for a specific vehicle.

701-461 Airaid SynthaMax Dry Media - Red
703-461 Airaid SynthaMax Dry Media - Blue

SynthaMax

Do Not Oil

Synthamax Air Filters do not require oil. Service air filter as needed by cleaning with common non-petroleum all-purpose household cleaner and water. Simple Green®, Formula 409® or equivalent works great. Apply cleaner to outside of air filter and allow to soak. Then flush filter clean from the inside out with a garden hose and repeat steps if necessary. Do not apply high pressure water or air to clean filter. Allow filter to air dry and reinstall.