

advanced FLOW engineering

Dynamic Air Scoop D.A.S.

Instruction Manual P/N: 54-72006-S

Make: RAM Model: 1500 EcoDiesel Year: 2014-2018 Engine: V6-3.0L (td)



- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7185.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.

Retain factory parts for future use.

Label	Qty.	Description	Part Number
A	1	Scoop, Rotomold	05-72006B3
B	2	Retainer Clip, 1/4"	05-01350


Installation will require the following tools:

Drill, 1/4" drill bit, marker, or punch to mark hole location, pliers.

Warranty Information available at: <https://afepower.com/contact#warranty>

Emissions Disclaimer:

This product is not currently CARB exempt and is not available for purchase in California or for use on any vehicle registered with the California Department of Motor Vehicles.

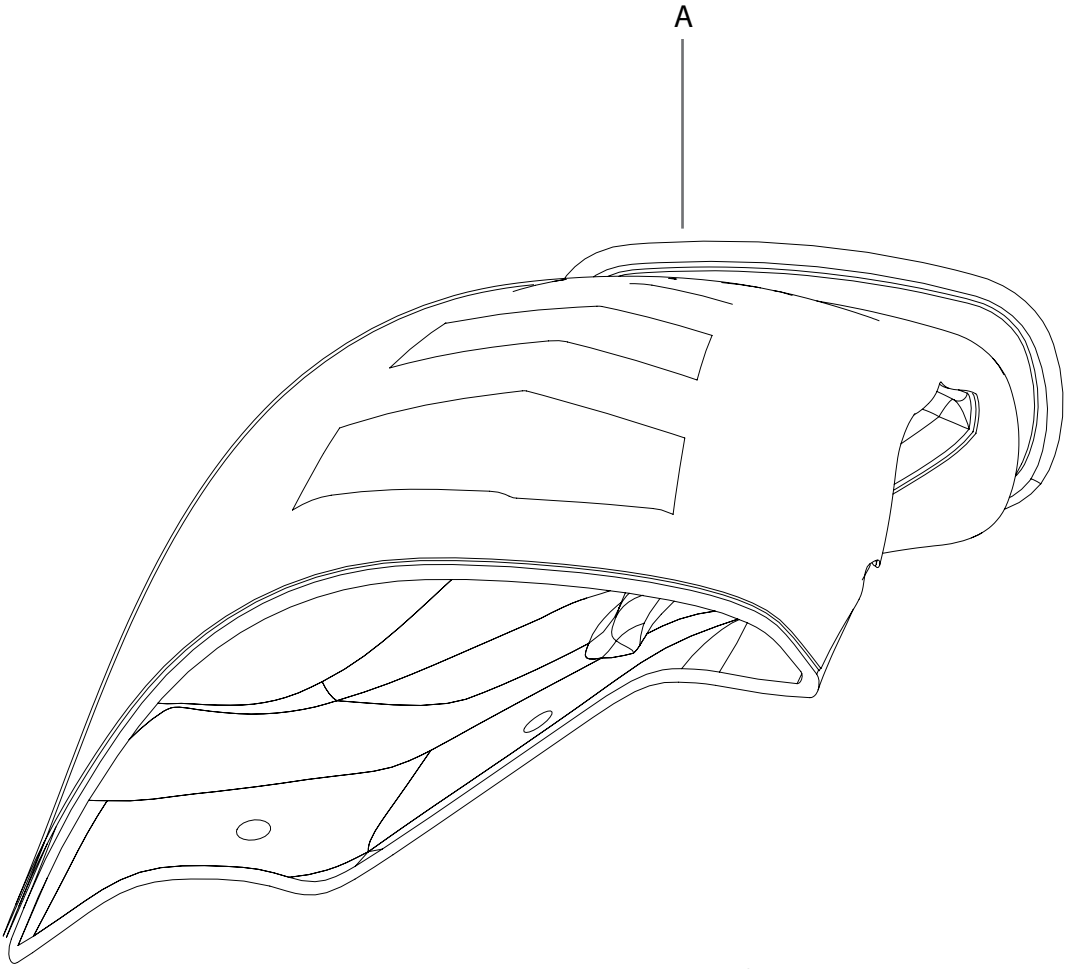

B



Refer to Figure A for Step 1

Step 1: Place the scoop into the truck as shown.



Figure B

Refer to Figure B for Step 2

Step 2: While holding the scoop snug against the aFe housing, align the bottom of the scoop flush with the factory plastic trim piece and mark the center of each hole ①



Refer to Figure C for Step 3

Step 3: Drill a 1/4" hole at each point you just marked ②.



Refer to Figure D for Step 4

Step 4: Support the bottom of the factory plastic trim and firmly press a retainer clip into each hole.

Your installation is now complete. Thank you for choosing aFe Power!



advanced FLOW engineering, inc.
252 Granite Street Corona, CA 92879
<https://afepower.com/contact>