

advanced FLOW engineering Momentum GT Cold Air Intake System

Instruction Manual P/N: 50-72205R / 50-72205D

Make: Dodge **Model:** Challenger SRT Hellcat

Year: 2017-2020

Engine: V8-6.2L(sc)

Make: Dodge **Model:** Charger SRT Hellcat

Year: 2017-2020

Engine: V8-6.2L(sc)



- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7185.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.
- Retain factory parts for future use.

Label	Qty.	Description	Part Number
A1	1	Air Filter (Pro 5R)	24-91101
A2	1	Air Filter (Pro DRY S)	21-91101
B	1	Tube	05-72205B1
C	1	Housing	05-72201B2
D	1	Clamp, T-bolt (4-9/16" - 4-7/8") (SS)	03-50319
E	1	Clamp, T-Bolt (4-1/8" – 4-1/2") (SS)	03-50262
F	1	Seal, Trim: 3/4" Bulb (21" Inches)	05-01507
G	1	Coupling, Silicone Bellow	05-01495
H	1	Grommet, Rubber	03-50167
I	1	Fitting, Air temp sensor	05-01454
J	2	Spring Clamp, 15/16" Hose (For 19-20 Models Only)	03-50646
K	1	Silicone Hose 1/2" ID (20 Inches) (For 19-20 Models Only)	05-01396
L	1	Elbow Fitting (For 19-20 Models Only)	03-50165
M	1	Easy-install Snap-Grip Clamp (For 19-20 Models Only)	03-50648

Installation will require the following tools:

8mm and 11mm nut driver or socket, flat screwdriver, blade and pliers.

Emissions Disclaimer: This product is not currently CARB exempt and is not available for purchase in California or for use on any vehicle registered with the California Department of Motor Vehicles.

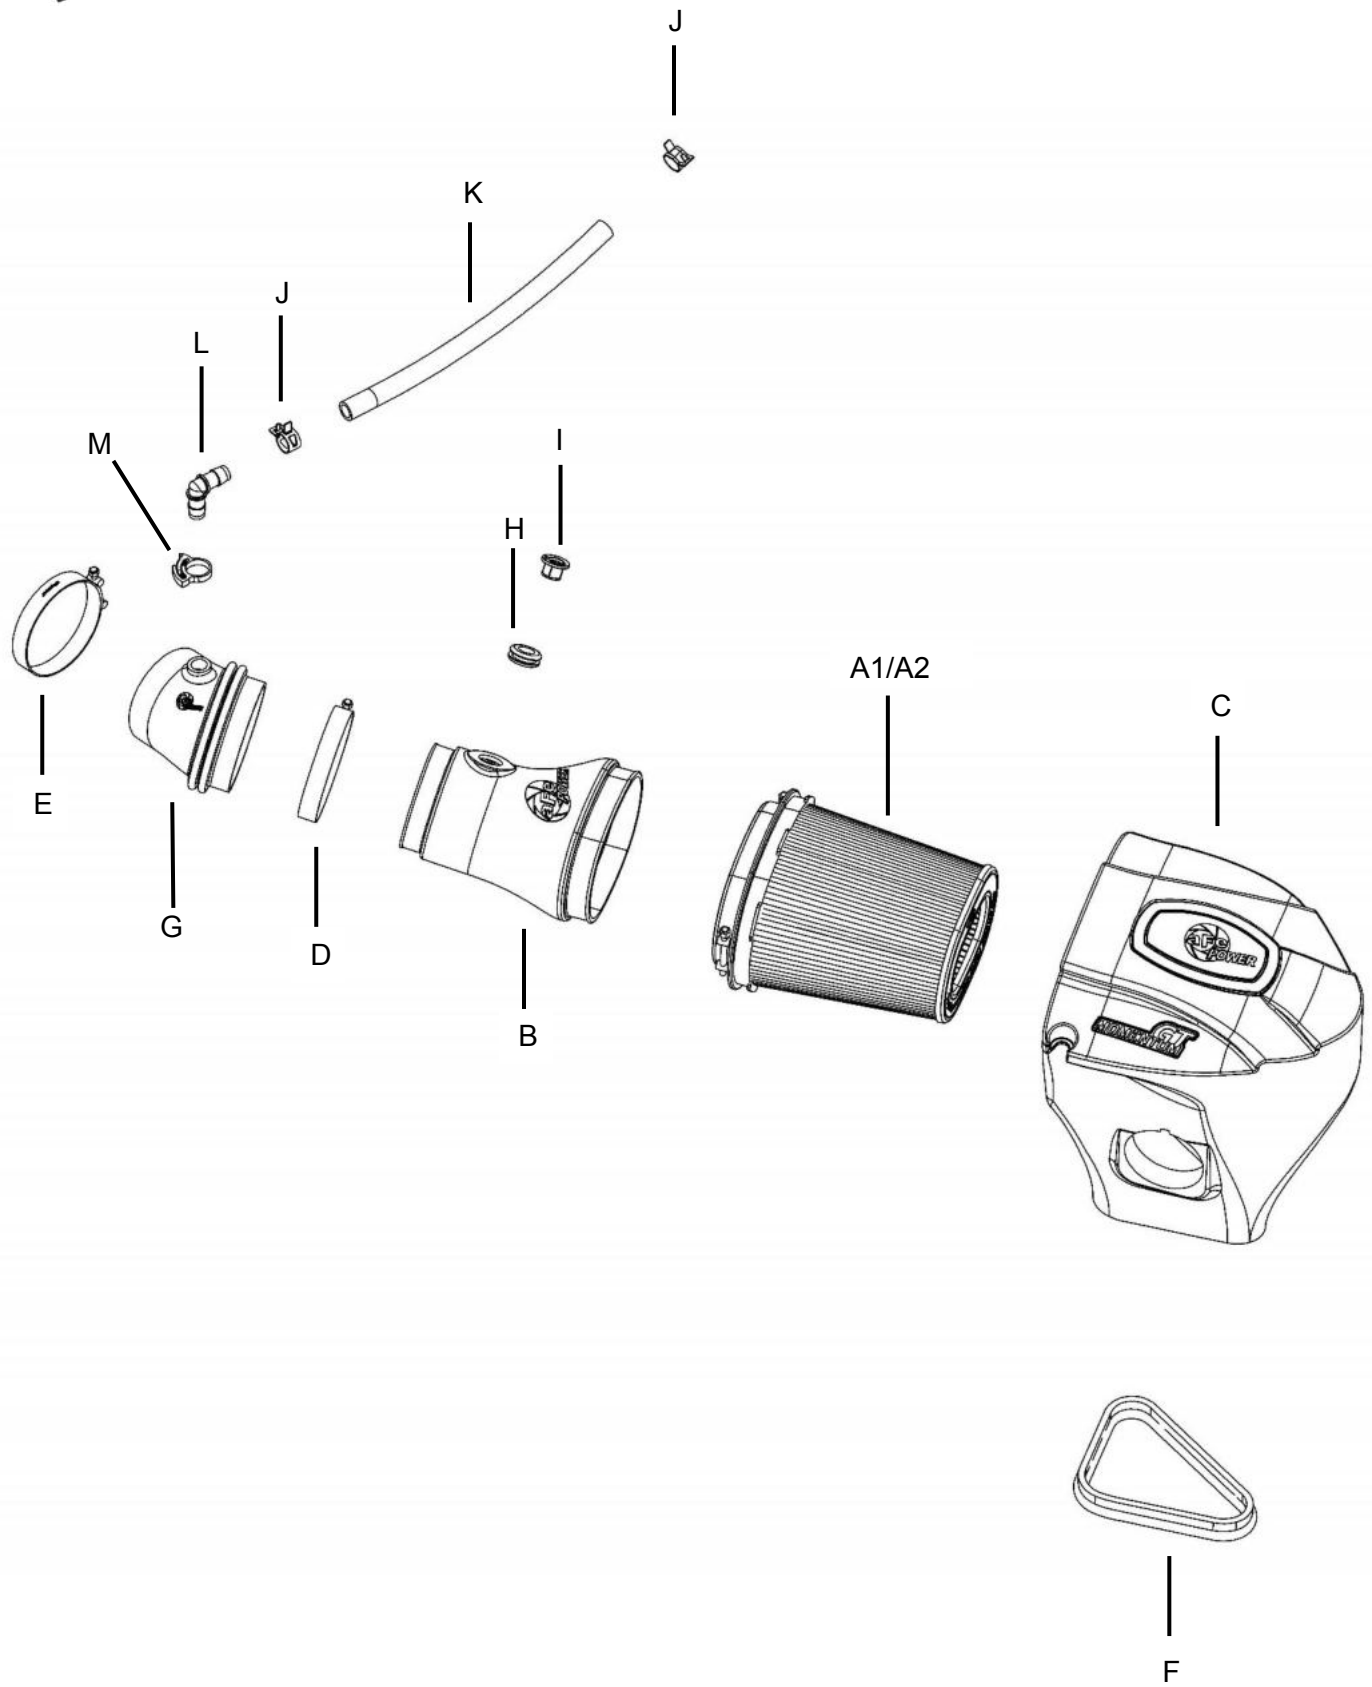




Figure A


Refer to Figure A for Steps 1-4:

Step 1: Disconnect the temperature sensor from the engine harness.

Step 2: **(For 17-18 Models ONLY)** Disconnect the 90-degree fitting from the PCV hose.

Step 3: Loosen clamp at the throttle body.

Step 4: Loosen the 3 screws securing the upper portion of the airbox to the lower portion.

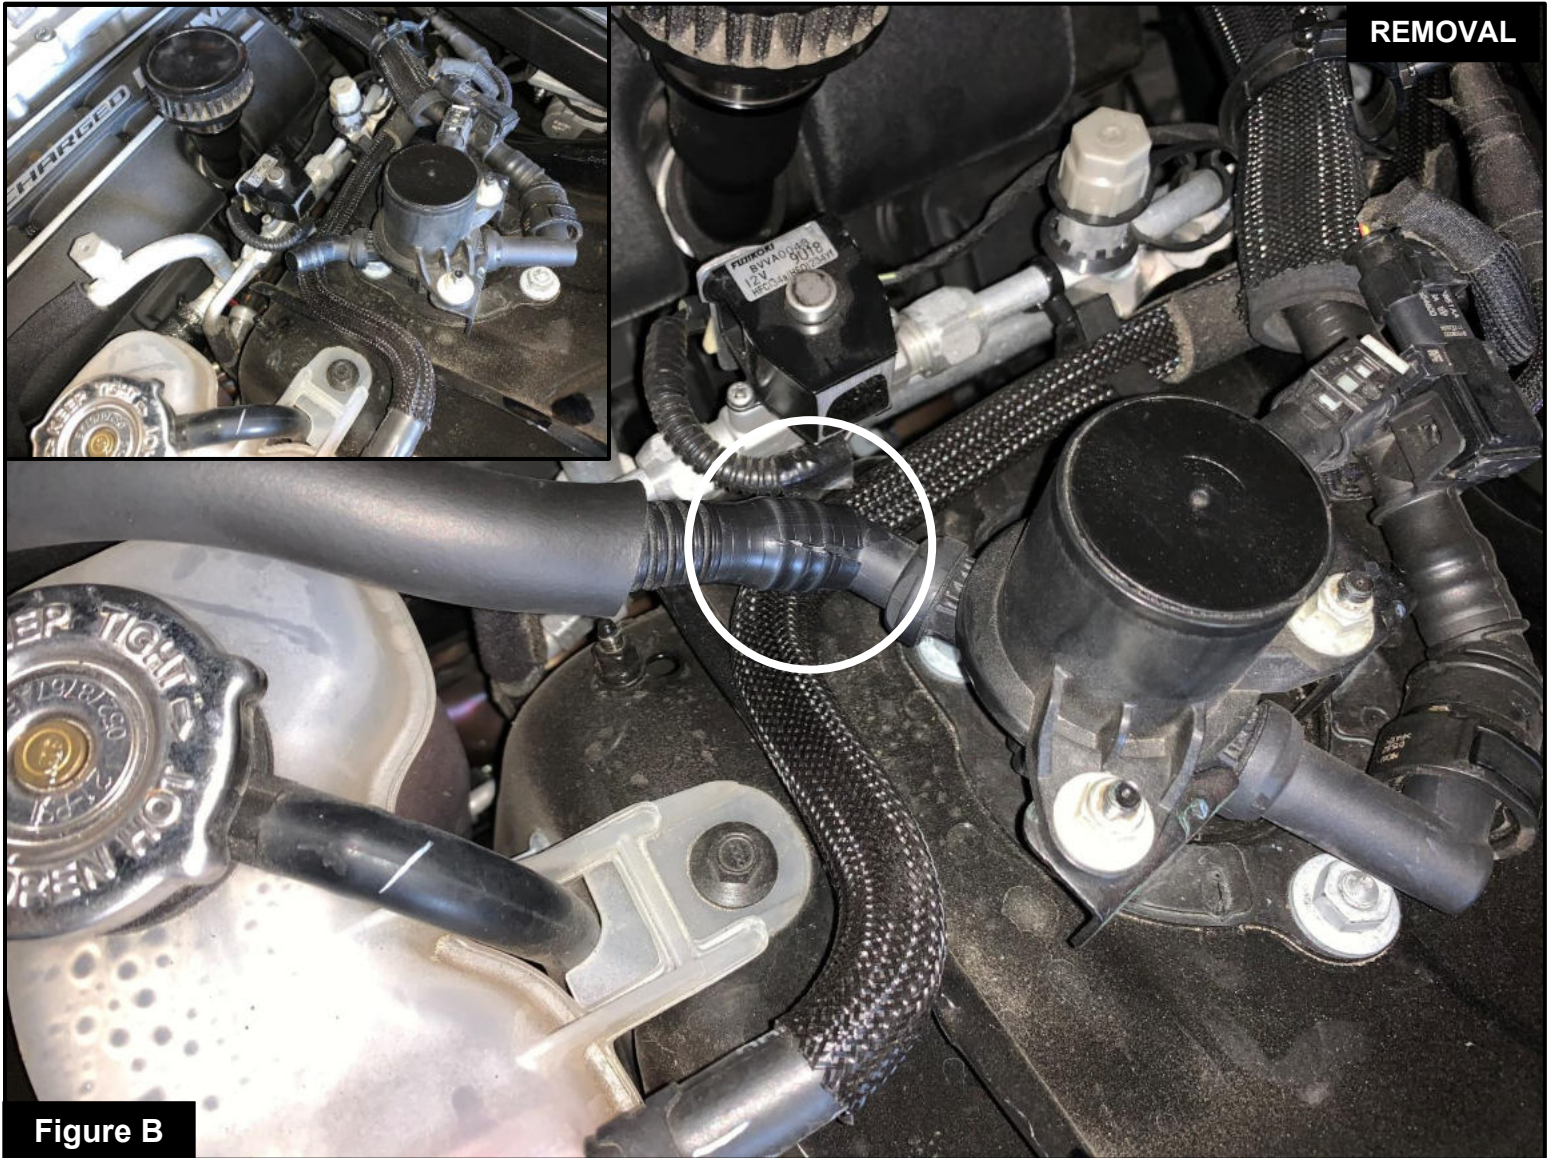

Refer to Figure B for Steps 5-7:

Step 5: **(For 19-20 models ONLY)** Slice the plastic line connected to MUA system. Try to make the cut as clean as possible, if you ever need to reinstall the factory intake in the future. We suggest to use heat-shrink sleeve to cover the cut if needed.

Step 6: **(For 19-20 models ONLY)** Disconnect the plastic hose from the MUA system. A silicone hose is provided to connect the aFe POWER tube to the MUA system.

Step 7: Remove the upper portion of the factory airbox and the flat panel air filter.

**Figure C****Refer to Figure C for Steps 8-10:**

Step 8: Using an 8mm nut driver, Remove the screw securing the factory airbox. This screw will be reused to secure the aFe POWER housing.

Step 9: **(For Challenger Models ONLY)** Remove the lower part of the factory airbox and inlet duct as one piece.

Step 10: **(For Charger Models ONLY)** Disconnect the inlet duct from the factory airbox and pull the lower part of the airbox outside of the vehicle. (The inlet duct is not removable on Charger models)



Refer to Figure D for Step 11:

Step 11: Make sure the factory mounting grommet is installed correctly into the hole. If the grommet stayed with the lower portion of the factory airbox, reinstall it into the hole on the wheel cover.

**Figure E****Refer to Figure E for Steps 12-15:**

Step 12: Transfer the metal sleeve and grommet from the factory airbox to the aFe POWER airbox.

Step 13: Install the provided trim seal around the bottom edge of the aFe POWER airbox.

Step 14: Slide the air filter inside the aFe POWER housing until it locks into place. Install the clamp on the filter flange. Do not tighten clamp at this time.

Step 15: **(For Challenger models ONLY)** Transfer the inlet duct from the lower portion of the factory airbox to the aFe POWER air box.



Figure F

Refer to Figure F for Step 16:

Step 16: Install the aFe POWER airbox into the vehicle. Do not install the 8mm bolt yet. **(For Charger models ONLY)** Connect the factory air inlet duct while installing the housing in.

**Figure G****Refer to Figure G for Steps 17-18:**

Step 17: Remove the temperature sensor from factory airbox. Install the provided grommet into the hole on the aFe POWER tube then press in the plastic fitting. Make sure to clock the fitting with the tab facing like Figure G.

Step 18: Secure the temperature sensor into the plastic fitting by turning clockwise.



Figure H

Refer to Figure H for Step 19:

Step 19: Install the coupling on the throttle body. Install the clamp closest to the throttle body only, do not tighten clamp yet.



Figure I

Refer to Figure I for Steps 20-24:


- Step 20: Install the aFe POWER intake tube, by sliding the tube into the filter first and then the coupling.
- Step 21: Open the remaining T-bolt clamp and install it over the coupling and tube end.
- Step 22: Make sure the coupling, tube and air filter are aligned correctly, then tighten all clamps.
- Step 23: Reinstall the screw removed at step 8 to secure the aFe POWER airbox.
- Step 24: Reconnect the temperature sensor harness.



Refer to Figure J for Steps 25-26:

Step 25: (For 17-18 models ONLY) Remove the elbow fitting from the factory tube and press it into the aFe POWER coupling.

Step 26: (For 17-18 models ONLY) Reconnect the elbow fitting to the factory hose.

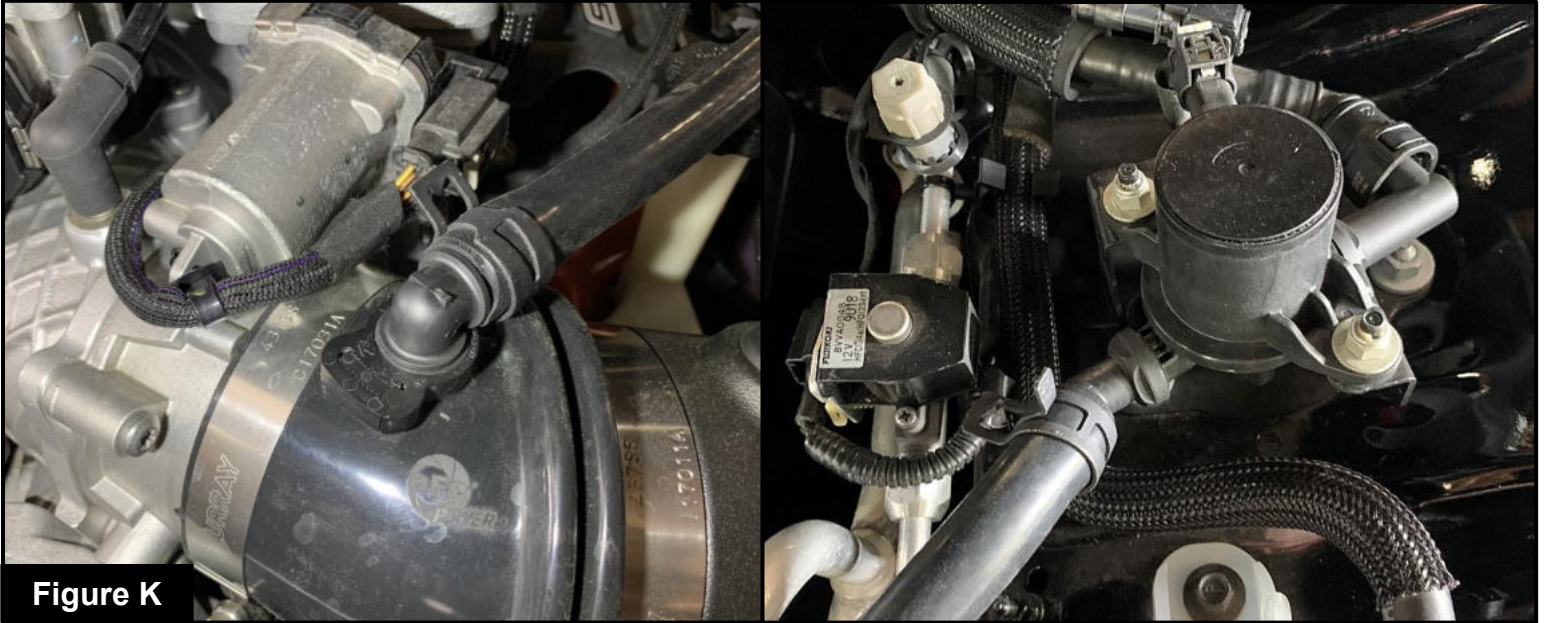
Figure K

Refer to Figure K for Steps 27-28:

Step 27: (For 19-20 Models ONLY) Install the two spring clamps over the provided silicone hose (deep enough on the hose so you can still install a fitting into the hose). Press the 90 Degree elbow fitting into one end of the hose.

Step 28: (For 19-20 Models ONLY) Place the Snap-Grip Clamp over the hole onto the coupling mounted to the throttle body then press in the 90 Degree elbow fitting into it. Connect the other end of the silicone hose to the MUA system. Move the spring clamps on the hose to secure the hose connections and close the Snap-Grip clamp using pliers to secure the 90 Degree fitting into the coupling.



Figure L

Refer to Figure L for Step 29:

Step 29: Verify all connections are secured. Your installation is now complete. Thank you for choosing aFe POWER!

NOTE: Check all screws, clamps, and connectors are secure after 100-200 miles.



Page left blank intentionally



Page left blank intentionally

Pro DRY S Air Filter



P/N: 21-91101

Pro 5R Air Filter



P/N: 24-91101

Pre-Filter



P/N: 28-10283

Mechanic Gloves (L)



P/N: 40-10149

Blue Squeeze Restore Kit



P/N: 90-50501

PRO DRY S Restore Kit



P/N: 90-59999

Sprint Booster Challenger



P/N: 77-12002

Sprint Booster Charger



P/N: 77-12009

Scoop Black



P/N: 54-72203-S

Scoop Carbon Fiber



P/N: 54-72203-SF

Scoop Blue



P/N: 54-72203-SL

Scoop Red



P/N: 54-72203-SR

To purchase any of the items above, view airflow charts, dyno graphs, photos, and video; please go to aFepower.com.



Warranty

General Terms:

- aFe warrants their products to be free from manufacturer's defects due to workmanship and material.
- This warranty applies only to the original purchaser of the product and is non-transferrable.
- Proof of purchase of the aFe product is required for all warranty claims.
- Warranty is valid provided aFe instructions for installation and/or cleaning were properly followed.
- Proper maintenance with regular inspections of product is required to insure warranty coverage.
- Damage due to improper installation, abuse, unauthorized repair or alteration is not warranted.
- Incidental or consequential damages or cost, including installation and removal of part, incurred due to failure of aFe product is not covered under this warranty.
- All warranty is limited to the repair and/or replacement of the aFe part. To request Return Goods Authorization ("RGA"), email RGA@afepower.com or call (951)493-7100. Upon receipt of the RGA, you must return the product to the address provided in the RGA, freight prepaid and accompanied with a dated proof of purchase and the RGA. Upon receipt of the defective product and upon verification of proof of purchase, aFe will either repair or replace the defective product within a reasonable time, not to exceed thirty days.

Product Category	P/N Prefix	Warranty duration
Direct OE Replacement Filters	10, 11, 30, 31, 71, 73	Life of the vehicle
Racing Filters	18	1 year
Universal	20, 21, 23, 24, 72, TF	2 years
Air Intake Systems	50, 51, 53, 54, 55, 56, 57, 58, 75, TR, TA, TL, TM	2 years
Exhaust Systems	49	2 years
Intercoolers & Intercooler Tubes	46-2	2 years
Intake Manifolds	46-1	2 years
Differential Cover	46-7	Life of the vehicle
Exhaust Manifolds	46	2 years
Throttle Body Spacers	46-3	2 years
Turbochargers	46-6	2 years*
Fluid Filters	44	90 days
Pre-Filters	28	2 years
Heavy Duty OE Replacement	70	2 years
PowerSports OE Replacement	81, 87	2 years
PowerSports Intake Systems	85	2 years

No other warranty expressed or implied applies nor is any person or advanced FLOW engineering authorized to assume any other warranty. Some States do not allow the exclusion or limitation of incidental or consequential damages or do not allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

*See turbocharger warranty for more info



advanced FLOW engineering, inc.

252 Granite Street Corona, CA 92879
TEL: 951.493.7100 • TECH: 951.493.7185
E-Mail: Tech@aFepower.com

P/N: 06-81367