



# Silver Bullet

Throttle Body Spacer

PN 46-34004



## Important!

Please verify the parts list and read all instruction steps before you begin installation.

Make	Model	Year	Engine
Chevrolet	Blazer	1987-1991, 1994-1995	V8-5.0/5.7L
Chevrolet	Suburban	1987-1995	V8-5.7L
Chevrolet	Tahoe	1992-1995	V8-5.7L
Chevrolet	S10/S15	1994-1995	V6-4.3L
Chevrolet	C/k 1500/2500/3500	1987-1995	V6-4.3 / V8-5.0/5.7L

1. Remove air cleaner assembly. Note: 92-95 models remove the two air cleaner studs.
2. From underneath the vehicle remove the 13mm nut retaining the wiring harness bracket. Next remove the 15mm stud that holds the fuel line-retaining strap. Remove line strap. Reinstall the 15mm stud and replace the wiring bracket fastening it back down with the 13mm nut.
3. Unbolt the throttle body bolts. Next remove the old throttle body gasket. It maybe necessary to completely remove the throttle body to do this procedure. Install a new gasket, Silver Bullet Spacer, another gasket and place the throttle body on top of the intake manifold. Once these are placed guide two bolts (drilled on the top) into the outer locations of the throttle body. Lastly, install the last non-drilled bolt in the front. Lightly snug all three bolts in a rotating pattern. Last of all and the most important, these bolts must be torqued to no more than 12 lb/ft. Over torque could result in severe engine damage, which advanced FLOW engineering, Inc. will not be responsible for.
4. Reinstall air cleaner studs, spacer and air cleaner assembly. On 1987-1992 models adjustment of the throttle-valve cable will be necessary. Procedure is listed below.

1. Depress and hold down the metal re-adjustment tab at the engine end of the TV cable.
2. Move the slider until it stops against the fitting.
3. Release the re-adjustment tab.
4. Engine Off. Rotate the throttle lever to its full travel position.
5. The slider must move (ratchet) toward the lever when lever is rotated to its full travel position.
6. Recheck after the engine is hot.
7. Road test the vehicle.

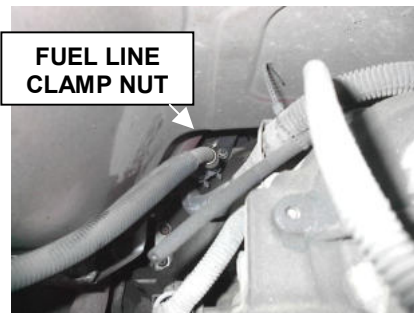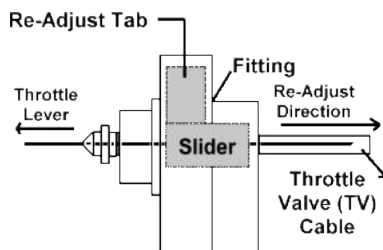

## Parts List

- 1 Silver Bullet Spacer
- 2 Gasket
- 3 5/16" flat washers
- 1 5/16" x 3 1/4" bolt
- 2 5/16" x 3 1/4" bolts drilled

advanced FLOW engineering

252 Granite Street, Corona, CA 92879

Support: 951-493-7100

www.aFePower.com